



Installation Instruction

TECHNICAL INFORMATION

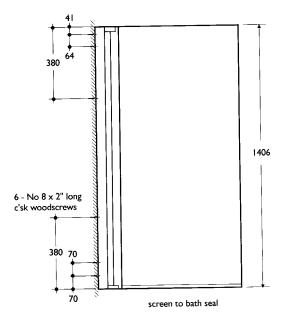




4.5 x 60mm countersunk scr


INSTALLATION


- **1.** Position compensating profile on bath 25mm from the edge of the bath and mark positions for fixing holes. Drill and plug holes (Fig. 2).
- **2.** Fix adjuster brackets, top and bottom connector angles and compensating profile to wall with 2" No. 8 countersunk woodscrews and washers (Fig. 2).

Note: Apply a suitable waterproof sealant to the compensating profile before fixing to wall.


- **3. Position bottom connector block** over bottom connector angle and secure centrally with M6 x 16 long socket head cap screw and washers (Fig. 3). (This may have to be repositioned at a later stage to allow for out of true walls).
- **4. Slide the adjuster member** over the bottom connector block and into the compensating profile (Fig. 5).

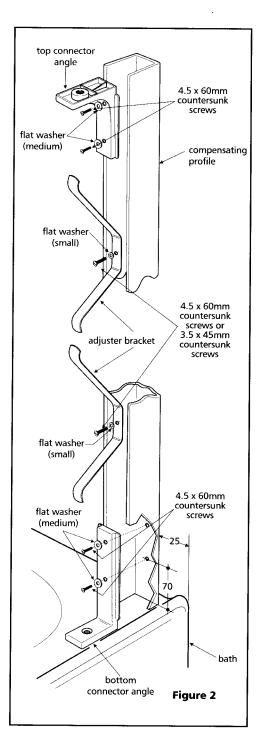

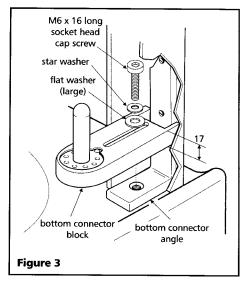

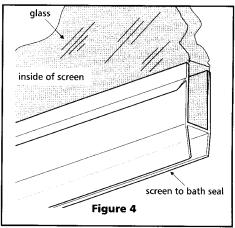

- **5.** Attach the screen to bath seal to the bottom of the glass ensuring the delfector blade is on the inside of the screen (Fig. 4).
- **6. Position the screen member** onto the bottom connector block (Fig. 5). Ensure the edge of the glass is plumb and secure at the top using the top connector block, M6 x 16 long socket head cap screw and washers (Fig. 6). **Note:** to gain extra adjustment refer to instruction 3.

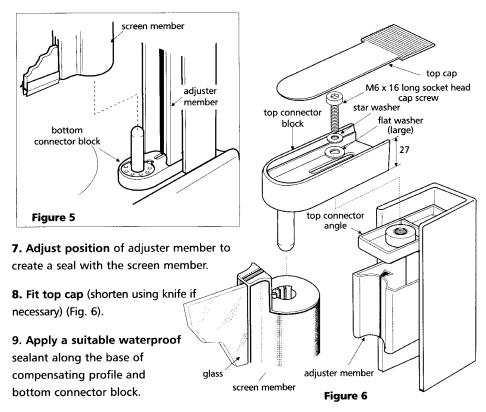

Ensure top and bottom connector blocks are fully engaged in screen member

CLEANING

Clean with a clean cloth and mild liquid soap and polish with a soft dry duster.

No abrasive powders, detergents or polishes should be used for cleaning the shower screen or frame.

The Bathroom Works National Avenue Kingston upon Hull HU5 4HS England

Telephone: (01482) 346461 Telefax: (01482) 445886.

O870 1296081

CUSTOMER CARE FAX LINE 01482 499611

American Standard pursues a policy of continuing improvement in design and performance of its products. The right is, therefore, reserved to vary specifications without notice.