


Timed Flow Controller For Concealed Pipes

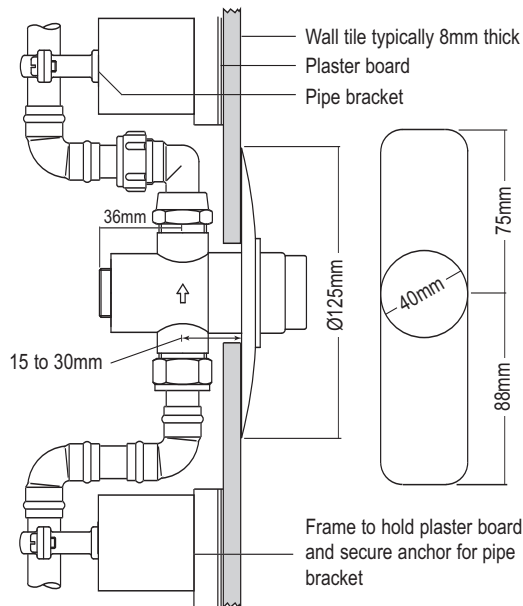

Operating Conditions

Max. Operating Pressure	10 bar
Min. Operating Pressure	0.2 bar
Max. Inlet Temperature	65°C
Timed Flow @ 3 bar	15 ± 3 sec.

Planning

The method of concealing and the structural requirements should be carefully planned before installation commences. Access should be available to the connections of the controller and shower head, e.g. drying cupboard. The controller can be housed in a wall cavity but consideration should be given to damage, to wall tiles, should access be required to the joints.

The installation shown is just one example and the dimensions given are to help in the planning.

Dimensions

The body of the controller requires a minimum diameter hole of 40mm in the wall tiles.

The plaster board needs a hole 40mm wide and depending upon the method used 176mm long (88mm x 2).

Support

The pipe brackets must be of a type that hold the pipe secure as these provide the support for the controller. The brackets should be positioned as close to the controller as possible - as shown. Additional brackets should also be fitted towards the shower head and on the supply pipe.

Installation Instructions

Flush the supply pipe before fitting the controller as debris will prevent it from working correctly.

The controller should be located immediately below the shower head approximately 1.1 to 1.2 m above the floor of the shower area.

Check the flow direction arrow to ensure that the flow will be vertically upwards to the shower head.

Concealing Plate

Apply silicone to seal the controller to the wall tiles and to the outer diameter on the back of the concealing plate.

Lubricate the seal with washing up liquid or similar before locating the seal and concealing plate on the controller and pushing firmly to the wall.

A service ball valve must be installed in the supply pipe work or the controller must be supplied via a thermostatic mixing valve, which has supply connections containing an isolating valve, to enable the controller and shower head to be isolated for cleaning or servicing.

Aftercare

To maintain the appearance of the flow controller periodically it should be cleaned with a soft damp cloth and a mild detergent before rinsing.

CUSTOMER CARE HELPLINE

0870 129 6085

CUSTOMER CARE FAX

01482 499611

E-MAIL

ukcustcare@aseur.com

*Armitage
Shanks*

Armitage Shanks
The Bathroom Works
National Avenue
Kingston-upon-Hull
HU5 4HS
England

Armitage Shanks pursue a policy of continuing improvement in design and performance of its products.

The right is therefore reserved to vary specification without notice.

Armitage Shanks is a division of Ideal Standard (UK) Ltd.

4577 0306

E9656000